



INSTALLATION AND OPERATION

USER MANUAL

WWW.UNICORE.COM

UM670A

Automotive-Grade GNSS Navigation and Positioning Module

Revision History

Version	Revision History	Date
R1.0	First release	Jul. 2024
R1.1	Added requirements for the NC pins	Aug. 2024
R1.2	Updated 3.6 Recommended Footprint on the PCB . Updated 4.3 Stencil . Updated the description of ANT_DETECT pin and refined the descriptions of ANT_OFF and ANT_SHORT_N pins. Updated Figure 3-1 UM670A Recommended Minimal Design and added C4 in the remarks.	Mar. 2025



Legal Right Notice

This manual provides information and details on the products of Unicore Communication, Inc. ("Unicore") referred to herein.

All rights, title and interest to this document and the information such as data, designs, layouts contained in this manual are fully reserved, including but not limited to the copyrights, patents, trademarks and other proprietary rights as relevant governing laws may grant, and such rights may evolve and be approved, registered or granted from the whole information aforesaid or any part(s) of it or any combination of those parts.

Unicore holds the trademarks of "和芯星通", "Unicore", "UNICORECOMM" and other trade name, trademark, icon, logo, brand name and/or service mark of Unicore products or their product serial referred to in this manual (collectively "Unicore Trademarks").

This manual or any part of it, shall not be deemed as, either expressly, implied, by estoppel or any other form, the granting or transferring of Unicore rights and/or interests (including but not limited to the aforementioned trademark rights), in whole or in part.

Disclaimer

The information contained in this manual is provided "as is" and is believed to be true and correct at the time of its publication or revision. This manual does not represent, and in any case, shall not be construed as a commitments or warranty on the part of Unicore with respect to the fitness for a particular purpose/use, the accuracy, reliability and correctness of the information contained herein.

Information, such as product specifications, descriptions, features and user guide in this manual, are subject to change by Unicore at any time without prior notice, which may not be completely consistent with such information of the specific product you purchase.

Should you purchase our product and encounter any inconsistency, please contact us or our local authorized distributor for the most up-to-date version of this manual along with any addenda or corrigenda.

Foreword

This document describes the information of the hardware, package, specification and the use of Unicore UM670A module.

Target Readers

This document applies to technicians who are familiar with GNSS receivers.

Contents

1	Introduction	1
1.1	Key Specifications	2
1.2	Block Diagram	4
2	Technical Specifications	5
2.1	Pin Definition	5
2.2	Electrical Specifications	8
2.2.1	Absolute Maximum Ratings	8
2.2.2	Operational Conditions	8
2.3	Dimensions	9
3	Hardware Design	11
3.1	Recommended Minimal Design	11
3.2	Antenna Feed Design	11
3.3	Antenna Detection Design	13
3.4	Power-on and Power-off	13
3.5	Grounding and Heat Dissipation	14
3.6	Recommended Footprint on the PCB	15
4	Production Requirements	16
4.1	Clean	16
4.2	Soldering	16
4.3	Stencil	17
5	Packaging	18
5.1	Label Description	18
5.2	Ordering Information	18
5.3	Product Packaging	19

1 Introduction

UM670A-12 is an automotive-grade multi-system navigation and positioning module designed for intelligent driving field. It supports L1 or L1 + L5 with different firmware.

UM670A-12 is based on the multi-system, dual-frequency and high-performance GNSS SoC - UC6580A, which conforms to the requirements of AEC-Q100, and the manufacturing process is in line with IATF 16949.



Figure 1-1 UM670A High Precision Positioning Module

Model	Order No.	Working Temperature	System					Interface			Data Update
		-40 °C ~ +85 °C	GPS	GLONASS*	BDS	Galileo	QZSS	UART	I2C**	SPI**	
UM670A	12	•	•	•	•	•	•	•			1/5/10* Hz

* Supported by specific firmware.

** Reserved interfaces.

1.1 Key Specifications

Table 1-1 Key Specifications

Power		
Supply Voltage	+2.7 V to +3.6 V DC, Typ.: 3.3 V	
LNA Feed Voltage	2.7 V to 3.3 V, ≤50 mA	
Power Consumption	150 mW	
RF Input		
System	GPS/GLONASS*/BDS/Galileo/QZSS	
VSWR	≤ 2.5	
Input Impedance	50 Ω	
Antenna Gain	15 dB to 30 dB	
Physical Characteristics		
Package	54 pin LGA	
Size	22.0 mm × 17.0 mm × 2.6 mm	
Interface		
UARTx1	TTL; baud rate supports 115200 bps to 921600 bps	
I ² Cx1	Reserved; address: 7 bit; working mode: slave; supports 400 Kbps at most	
SPIx1	Reserved; Alternate function of Pin42 to 45 working mode: slave; supports 4 Mbps at most	
GNSS Performance		
Frequency	L1 single-frequency	L1+L5 dual-frequency
	GPS L1C/A	GPS L1C/A, L5
	GLONASS* G1	GLONASS* G1
	BDS B1	BDS B1I, B2a
	Galileo E1	Galileo E1, E5a
	QZSS L1	QZSS L1C/A, L5
TTFF	Cold start:26s	
	Hot start: 2s	
	Reacquisition: 2s	
Positioning Accuracy (RMS)	Horizontal: 1.5 m (open sky) Vertical: 2.5 m (open sky)	
Velocity Accuracy (RMS) ¹	0.05 m/s	

* Supported by specific firmware.

¹ 68% at 30 m/s for dynamic operation, open sky

		L1 single-frequency	L1+L5 dual-frequency
Sensitivity	Tracking	-162 dbm	-162 dbm
	Cold Start	-147 dbm	-148 dbm
	Hot Start	-157 dbm	-158 dbm
	Requisition	-158 dbm	-160 dbm
GNSS Data Update	1 Hz/5 Hz/10 Hz*		
1PPS Accuracy (RMS)	20 ns		
Data Format	NMEA 0183, Unicore Protocol		
Environment Specifications			
Working Temperature	-40 °C to +85 °C		
Storage Temperature	-40 °C to +85 °C		
Humidity	95% No condensation		
Vibration	GB/T 28046.3; ISO 16750.3		
Shock	GB/T 28046.3; ISO 16750.3		

* Supported by specific firmware.

1.2 Block Diagram

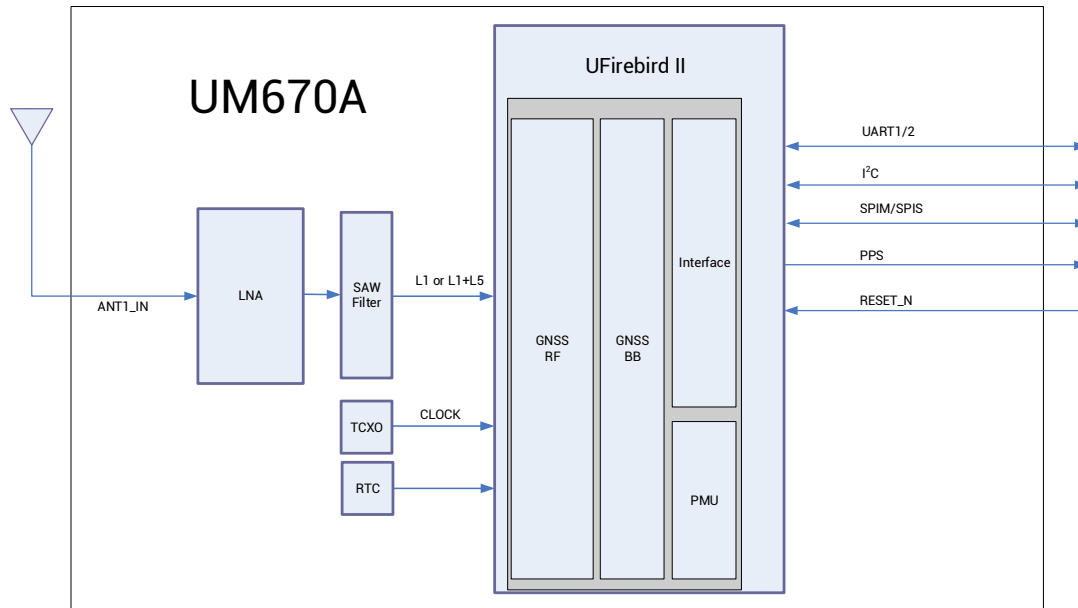


Figure 1-2 UM670A Block Diagram²

1. RF Part

The receiver gets filtered and enhanced GNSS signals from the antenna via a coaxial cable. The RF part converts the RF input signals into the IF signals, and converts IF analog signals into digital signals required for UFirebirdII chip.

2. UFirebirdII SoC (UC6580A)

UFirebirdII is the new generation RF-baseband and high-precision algorithm integrated SoC developed by Unicore. It adopts 22 nm technology and low power consumption design, supporting multi-path mitigation, anti-jamming and high precision GNSS joint positioning. The chip is especially suitable for the application scenarios which are sensitive to power and size.

3. Interfaces

UM670A has interfaces such as UART, I²C*, SPI*, PPS and RESET_N.

The UART1 and UART2 both support data transmission, and the UART1 also supports firmware upgrade. The I/O signal type is LVTTTL and the baud rate can be configured by users.

² Antenna detection, SPIM and UART2 are supported by the hardware version V1.1 and above. SPIS shares pins with I²C/UART1.

* I²C and SPI are reserved interfaces.

2 Technical Specifications

2.1 Pin Definition

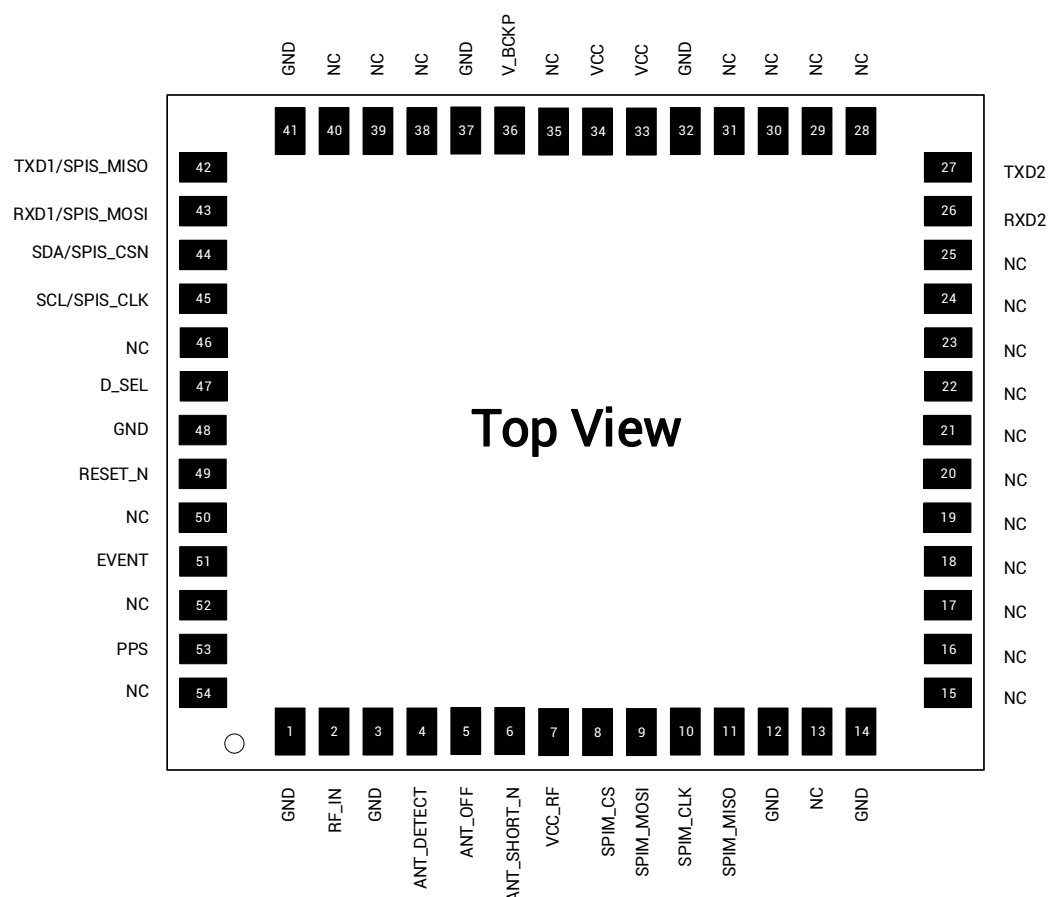


Figure 2-1 UM670A Pin Definition

Table 2-1 Pin Definition

No.	Pin	I/O	Description
1	GND	—	Ground
2	RF_IN	I	GNSS antenna signal input
3	GND	—	Ground
4	ANT_DETECT*	—	Active antenna detection. Active high. High = antenna detected; Low = antenna not detected.
5	ANT_OFF*	—	Disable external antenna power supply. Active high. High = disable external antenna; Low = enable external antenna.

* Supported by the hardware version V1.1 and above

No.	Pin	I/O	Description
6	ANT_SHORT_N*	—	Active antenna short detection. Active low. Low = antenna short circuit; High = antenna power status normal.
7	VCC_RF ³	O	Antenna feed output
8	SPIM_CS*	O	SPI master chip select
9	SPIM_MOSI*	O	SPI master Master Out/Slave In
10	SPIM_CLK*	—	SPI master clock
11	SPIM_MISO*	I	SPI master Master In/Slave Out
12	GND	—	Ground
13	NC	—	No connection inside; leave floating
14	GND	—	Ground
15	NC	—	No connection inside; leave floating
16	NC	—	No connection inside; leave floating
17	NC	—	No connection inside; leave floating
18	NC	—	No connection inside; leave floating
19	NC	—	No connection inside; leave floating
20	NC	—	No connection inside; leave floating
21	NC	—	No connection inside; leave floating
22	NC	—	No connection inside; leave floating
23	NC	—	No connection inside; leave floating
24	NC	—	No connection inside; leave floating
25	NC	—	No connection inside; leave floating
26	RXD2*	I	UART2 input
27	TXD2*	O	UART2 output
28	NC	—	No connection inside; leave floating
29	NC	—	No connection inside; leave floating
30	NC	—	No connection inside; leave floating
31	NC	—	No connection inside; leave floating
32	GND	—	Ground
33	VCC	I	Power supply (+3.3 V)

³ Not recommended to use VCC_RF to feed the antenna (VCC_RF is not optimized for the anti-lightning strike and anti-surge due to the compact size of the module).

No.	Pin	I/O	Description
34	VCC	I	Power supply (+3.3 V)
35	NC	—	No connection inside; leave floating
36	V_BCKP	I	When the main power supply VCC is cut off, V_BCKP supplies power to RTC and relevant register. Supply voltage: 2.0 V to 3.6 V, and the working current is less than 10 μ A at 25 °C. If you do not use the hot start function, connect V_BCKP to VCC or a standalone power source. Do NOT connect it to ground or leave it floating.
37	GND	—	Ground
38	NC	—	No connection inside; leave floating
39	NC	—	No connection inside; leave floating
40	NC	—	No connection inside; leave floating
41	GND	—	Ground
42	TXD1/SPIS_MISO	O	SPI slave Master In/Slave Out (D_SEL=GND); UART1 output (D_SEL=VCC or floating)
43	RXD1/SPIS_MOSI	I	SPI slave Master Out/Slave In (D_SEL=GND); UART1 input (D_SEL=VCC or floating)
44	SDA/SPIS_CSN	I	I ² C data (D_SEL=VCC or floating); SPI slave chip select (D_SEL=GND)
45	SCL/SPIS_CLK	I	I ² C clock (D_SEL=VCC or floating); SPI slave clock (D_SEL=GND)
46	NC	—	No connection inside; leave floating
47	D_SEL	I	Interface select pin; Use pin 42 to 45 as a SPI slave when D_SEL = GND, as UART1 and I ² C When D_SEL=VCC or floating
48	GND	—	Ground
49	RESET_N	I	System reset; active low; the active time should be no less than 5 ms
50	NC	—	No connection inside; leave floating
51	EVENT	I	Event Mark, with adjustable frequency and polarity
52	NC	—	No connection inside; leave floating
53	PPS	O	Pulse per second with adjustable pulse width and polarity
54	NC	—	No connection inside; leave floating

2.2 Electrical Specifications

2.2.1 Absolute Maximum Ratings

Table 2-2 Absolute Maximum Ratings

Parameter	Symbol	Min.	Max.	Unit	Remark
Power Supply	VCC	-0.2	3.6	V	
Backup Battery	V_BCKP	-0.2	3.6	V	
Digital Pin Voltage		-0.2	3.6	V	
Antenna RF Input Power	RF_IN	-	-3	dBm	
Storage Temperature	T _{STG}	-40	+85	°C	
Reflow Soldering Temperature	T _{SLDR}	-	+245	°C	

2.2.2 Operational Conditions

Table 2-3 Operational Conditions

Parameter	Symbol	Min.	Typ.	Max.	Unit	Condition
Power Supply	VCC	2.7	3.3	3.6	V	
VCC Ripple	V _{p-p}			50	mV	
Peak Current	I _{ccp}			200	mA	VCC = 3.0 V
Average Tracking Current ⁴	I _{ACQ}		45	48	mA	VCC = 3.3 V
Low Level Input Voltage	V _{IL}	-0.3		0.2 × VCC	V	
High Level Input Voltage	V _{IH}	0.7 × VCC		3.6	V	
Low Level Output Voltage	V _{OL}	0		0.4	V	I _{out} = -2 mA
High Level Output Voltage	V _{OH}	VCC - 0.4		Vcc	V	I _{out} = 2 mA
Antenna Gain	G _{ANT}	15	20	30	dB	

⁴ Since the product has capacitors inside, inrush current occurs during power-on. You should evaluate in the actual environment in order to check the effect of the supply voltage drop caused by inrush current in the system.

This reference value is got from the samples after cold start, and the actual value can vary depending on the factors including firmware version, external circuit, number of the satellites tracked, signal strength, type and time of start, duration, and conditions of test.

2.3 Dimensions

Table 2-4 Dimensions

Symbol	Min. (mm)	Typ. (mm)	Max. (mm)
A	21.80	22.00	22.50
B	16.80	17.00	17.50
C	2.40	2.60	2.80
D	3.75	3.85	3.95
E	0.95	1.05	1.15
F	1.80	1.90	2.00
G	1.00	1.10	1.20
H	0.70	0.80	0.90
K	1.40	1.50	1.60
M	3.55	3.65	3.75
N	3.15	3.25	3.35
P	2.00	2.10	2.20
R	1.00	1.10	1.20
X	0.72	0.82	0.92

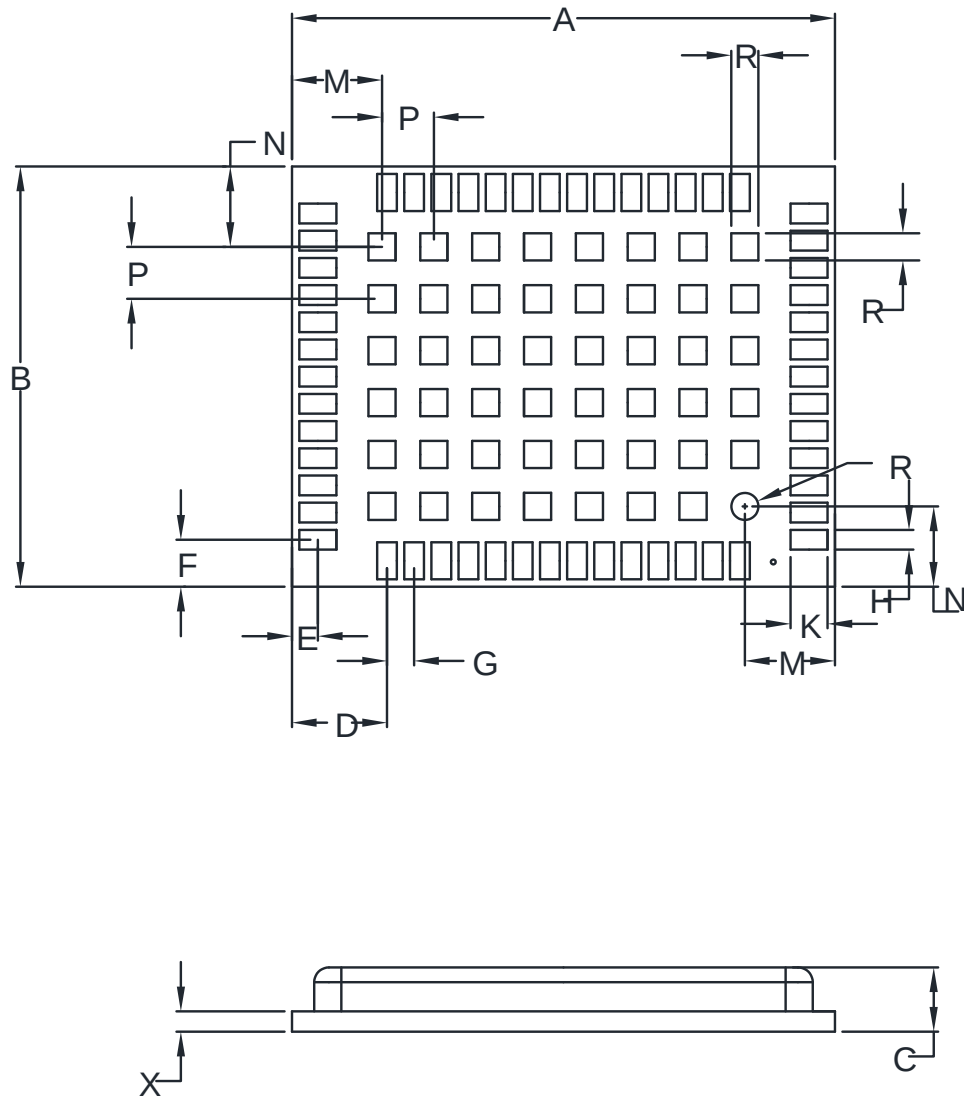


Figure 2-2 UM670A Mechanical Dimensions

3 Hardware Design

3.1 Recommended Minimal Design

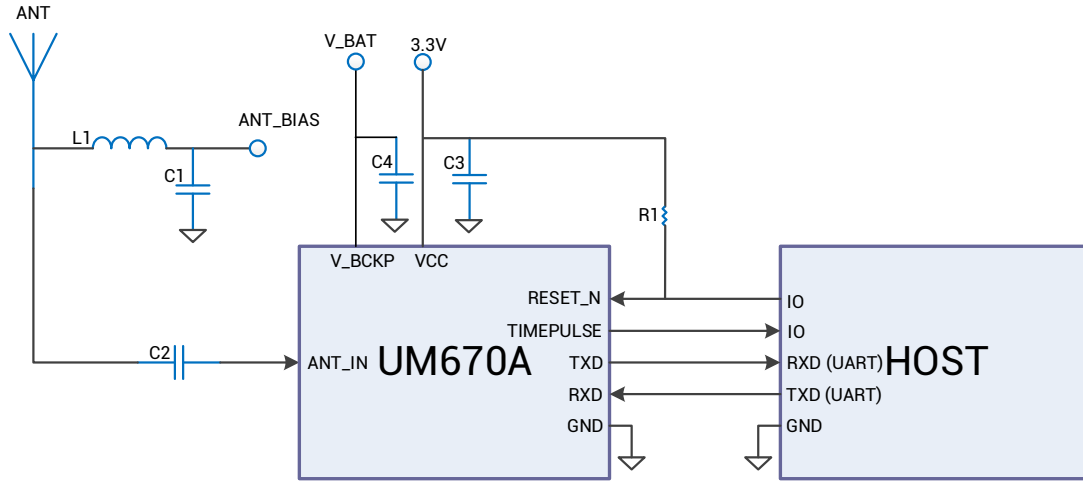


Figure 3-1 UM670A Recommended Minimal Design

Remarks:

- L1: 68 nH RF inductor in 0603 package is recommended
- C1: 100 nF + 100 pF capacitors connected in parallel is recommended
- C2: 100 pF capacitor is recommended
- C3: Several 10 μ F + 100 nF capacitors connected in parallel is recommended
- C4: 100 nF capacitor is recommended
- R1: 10 k Ω resistor is recommended

3.2 Antenna Feed Design

UM670A just supports feeding the antenna from the outside of the module rather than the inside. It is recommended to use devices with high power and that can withstand high voltage. Gas discharge tube, varistor, TVS tube and other high-power protective devices may also be used in the power supply circuit to further protect the module from lightning strike and surge.

⚠ If the antenna feed supply ANT_BIAS and the module's main supply VCC use the same power rail, the ESD, surge and overvoltage from the antenna will have an effect on VCC, which may cause damage to the module. Therefore, it is recommended to design an independent power rail for the ANT_BIAS to reduce the possibility of module damage.

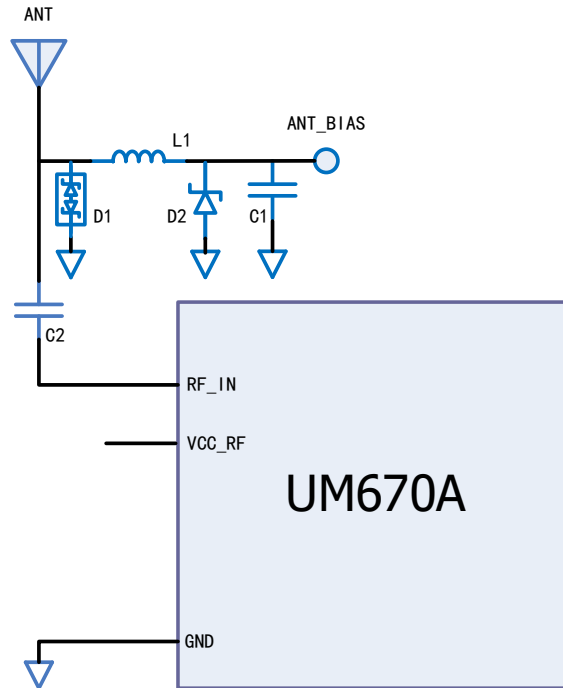


Figure 3-2 UM670A External Antenna Feed Reference Circuit

Remarks:

- L1: feed inductor, 68nH RF inductor in 0603 package is recommended;
- C1: decoupling capacitor, it is recommended to connect two capacitors of 100nF/100pF in parallel;
- C2: DC blocking capacitor, recommended 100pF capacitor;
- Not recommended to take VCC_RF as ANT_BIAS to feed the antenna (VCC_RF is not optimized for the anti-lightning strike and anti-surge due to the compact size of the module)
- D1: ESD diode, choose the ESD protection device that supports high frequency signals (above 2000 MHz)
- D2: TVS diode, choose the TVS diode with appropriate clamping specification according to the requirement of feed voltage and antenna voltage

3.3 Antenna Detection Design⁵

UM670A supports the detection of open circuit and short circuit, and it will cut the antenna feed supply when a short circuit happens. The antenna detection circuit is connected to the pins of ANT_DETECT, ANT_SHORT_N and ANT_OFF, the voltage level of which can be used to judge the antenna status.

 Refer to [UM670A Hardware Reference Design](#) for the details of the antenna detection circuit.

3.4 Power-on and Power-off

VCC

- The VCC initial level when power-on should be less than 0.4 V.
- The VCC ramp when power-on should be monotonic, without plateaus.
- The voltages of undershoot and ringing should be within 5% VCC.
- VCC power-on waveform: The time interval from 10% rising to 90% must be within 100 μ s to 10 ms.
- Power-on time interval: The time interval between the power-off ($V_{CC} < 0.4$ V) to the next power-on must be larger than 500 ms.

V_BCKP

- The V_BCKP initial level when power-on should be less than 0.4 V.
- The V_BCKP ramp when power-on should be monotonic, without plateaus.
- The voltages of undershoot and ringing should be within 5% V_BCKP.
- V_BCKP power-on waveform: The time interval from 10% rising to 90% must be within 100 μ s to 10 ms.
- Power-on time interval: The time interval between the power-off ($V_{BCKP} < 0.4$ V) to the next power-on must be larger than 500 ms.

⁵ Supported by the specific firmware.

3.5 Grounding and Heat Dissipation

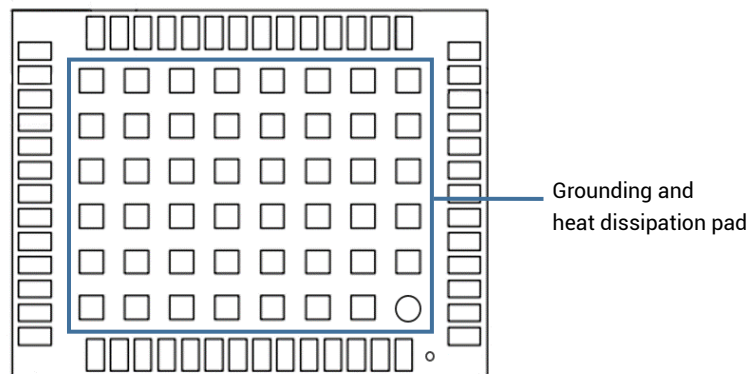


Figure 3-3 Grounding and Heat Dissipation Pad

The 48 pads in the rectangle in Figure 3-3 are for grounding and heat dissipation. In the PCB design, it is recommended to connect them to a large sized ground to strengthen the heat dissipation.

3.6 Recommended Footprint on the PCB

The dimensions of UM670A's footprint on the PCB is recommended to be the same as that of the module's pads, as shown in **Figure 3-4 Recommended Footprint**. For more information about the module's dimensions, see **2.3 Dimensions**.

- ☞ For the convenience of hardware testing and debugging, proper test points can be added for the functional pins of the module.
- ☞ The dimensions of PCB pads can be optimized according to the specific production process to ensure manufacturability and reliability.

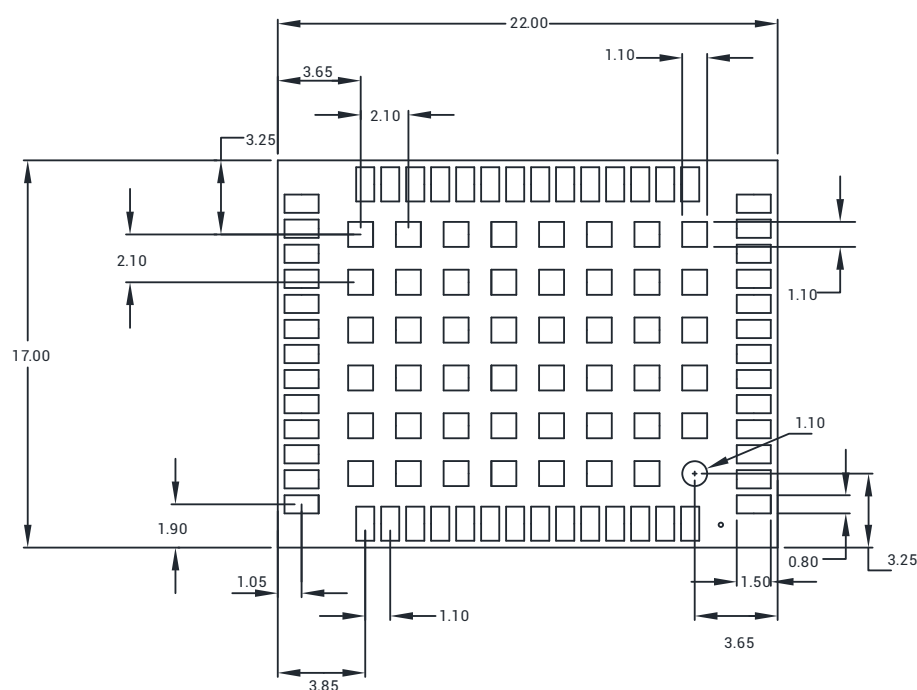


Figure 3-4 Recommended Footprint (Unit: mm)

4 Production Requirements

4.1 Clean



Do NOT use alcohol or other organic solvents to clean the module, or it may lead to flux residues entering into the shielding shell, causing mildew and other problems.

4.2 Soldering

Recommended soldering temperature curve is as follows:

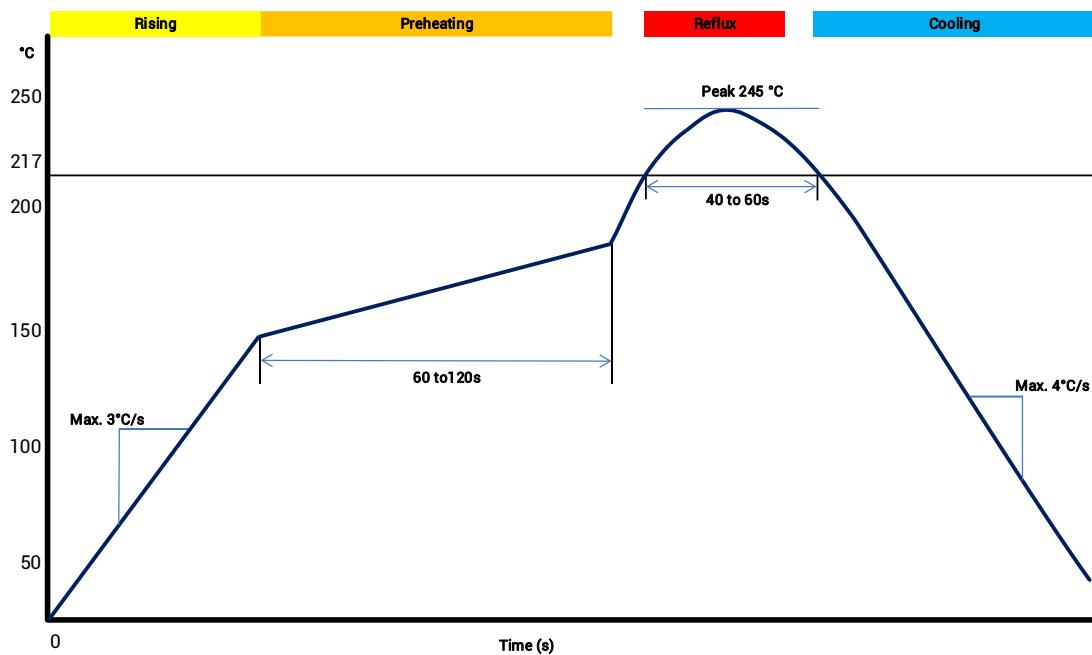


Figure 4-1 Soldering Temperature (Lead-free)

Temperature Rising Stage

- Rising slope: Max. 3 °C/s
- Rising temperature range: 50 °C to 150 °C

Preheating Stage

- Preheating time: 60 s to 120 s
- Preheating temperature range: 150 °C to 180 °C

Reflux Stage

- Over melting temperature (217 °C) time: 40 s to 60 s

- Peak temperature for soldering: no higher than 245 °C

Cooling Stage

- Cooling slope: Max. 4 °C/s



In order to prevent falling off during soldering of the module, do not solder it on the back of the board during design, that is, better not go through soldering cycle twice.

The setting of soldering temperature depends on many factors of the factory, such as board type, solder paste type, solder paste thickness, etc. Please also refer to the relevant IPC standards and indicators of solder paste.

4.3 Stencil

The apertures in the stencil need to meet the customer's own design requirements and inspection specifications. The thickness of the stencil is recommended to be 0.15 mm (not less than 0.12 mm).

 The design of the stencil can be optimized according to the specific production process to ensure manufacturability and reliability.

5 Packaging

5.1 Label Description



Figure 5-1 Label Description

5.2 Ordering Information


Ordering Information	Ordering Code	Description
UM670A	12	Automotive grade; L1 or L1+L5; operating temperature: -40 °C to +85 °C; supporting firmware upgrade; 22 mm x 17 mm; 250 pieces/reel

5.3 Product Packaging

The UM670A module uses carrier tape and reel (suitable for mainstream surface mount devices), packaged in vacuum-sealed aluminum foil antistatic bags, with a desiccant inside to prevent moisture. When using reflow soldering process to solder modules, please strictly comply with IPC standard to conduct humidity control. As packaging materials such as the carrier tape can only withstand the temperature of 55 °C, modules shall be removed from the package during baking.



Figure 5-2 UM670A Package

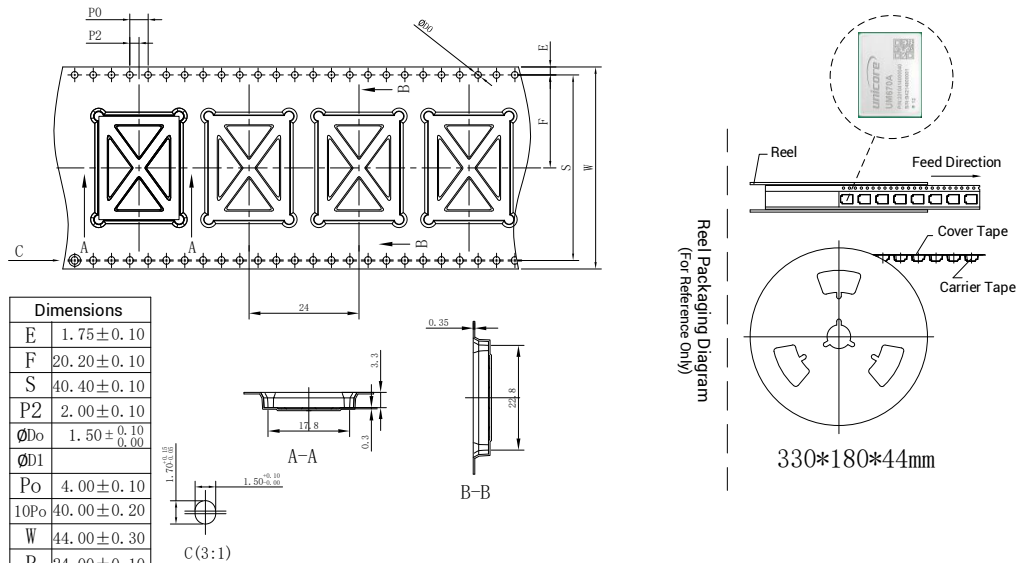

Note:

1. The cumulative tolerance of 10 side holes should not exceed ± 0.2 mm.
2. Material of the tape: Black antistatic PS (surface impedance $<10^5-10^{11}$) (surface static voltage <100 V), thickness: 0.35 mm.
3. Total length of the 13-inch reel package: 6.816 m (Length of the first part of empty packets: 0.408 m, length of packets containing modules: 6 m, length of the last part of empty packets: 0.408 m).
4. Total number of packets in the 13-inch reel package: 284 (Number of the first part of empty packets: 17; actual number of modules in the packets: 250; number of the last part of empty packets: 17).
5. All dimension designs are in accordance with EIA-481-C-2003.
6. The maximum bending degree of the carrier tape within the length of 250 mm should not exceed 1 mm (see the figure below).

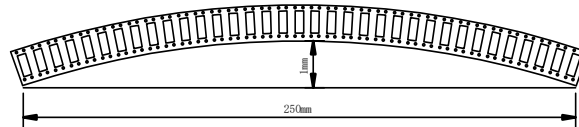


Figure 5-3 UM670A-03 Reel Package Diagram

Table 5-1 Package Description

Item	Description
Module Number	250 pieces/reel
Reel Size	Tray: 13" External diameter: 330 ± 2 mm Internal diameter: 180 ± 2 mm Width: 44.5 ± 0.5 mm Thickness: 2.0 ± 0.2 mm
Carrier Tape	Space between (center-to-center distance): 24 mm

UM670A-12 User Manual

Before surface mounting, make sure that the color of the 30% circle on the HUMIDITY INDICATOR is blue (see Figure 5-4). If the color of the 20% circle is pink and the color of the 30% circle is lavender (see Figure 5-5), you must bake the module until it turns to blue. The UM670A is rated at MSL level 3. Refer to the relevant IPC/JEDEC J-STD-033 standards for the package and operation requirements. Users may access to the website www.jedec.org to get more information.

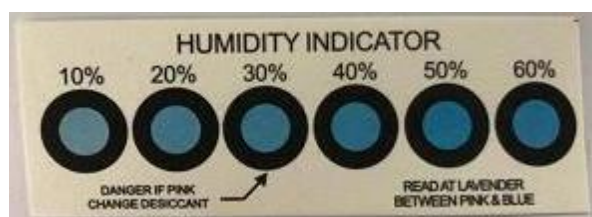


Figure 5-4 Normal Humidity Indication

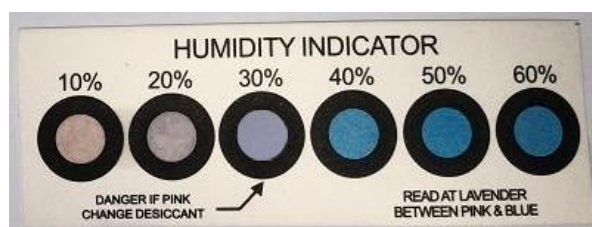


Figure 5-5 Abnormal Humidity Indication

The shelf life of the UM670A module packaged in vacuum-sealed aluminum foil antistatic bags is one year.

和芯星通科技（北京）有限公司

Unicore Communications, Inc.

北京市海淀区丰贤东路 7 号北斗星通大厦三层
F3, No.7, Fengxian East Road, Haidian, Beijing, P.R.China,
100094
www.unicore.com

Phone: 86-10-69939800

Fax: 86-10-69939888

info@unicorecomm.com



www.unicore.com